

# IJ-35/45/40/50/60 – Changing the Default Stamp Value from \$0.39 to \$0.41



## Default Stamp Value:

The Default Stamp Value allows the user to determine the default postage value that is displayed each time the meter is powered on or returns from Locked mode.

<p>1</p>	<p>If the meter shows last years rate after installing the new rate card, then the <b>Default Stamp Value</b> has to be changed.</p> <p>Press the <b>Lock</b> button to display the main screen. Press the <b>SUPERVIS</b> Button and enter the Supervisor password (<b>9430</b>).</p>	
<p>2</p>	<p>Select <b>Setup</b> using the up &amp; down arrows. Then press <b>OK</b>.</p>	
<p>3</p>	<p>In the <b>SETUP</b> menu use the up &amp; down arrows to select "<b>Default Stamp Value</b>". Then press the <b>OK</b> button.</p>	
<p>4</p>	<p>You will see a box that contains "<b>Default Stamp Value</b>" and \$0.00 value. Enter the new desired default value and press <b>OK</b>. <b>Note:</b> To set \$0.41 as a default, enter 410. Then press <b>OK</b>.</p>	
<p>5</p>	<p>From the <b>SETUP</b> screen, you should see the updated value. Press the <b>Lock</b> button to return to the <b>Neopost</b> main screen.</p> <p>Enter <b>User</b> to assure the <b>Default Stamp Value</b> has been changed.</p>	

Detailed Rate-Pak™ installation procedures can be viewed on our website at: <http://www.neopostinc.com> , click on USPS Rate Change 2007 then Installation